

Static Pressure Controller

- Air Pressure Sensing Switch
- For Use with POC and RPOC Dampers
- Adjustable Air Switch Set Point Range

GENERAL DESCRIPTION

The **SPC** is a static pressure switch designed to sense positive pressure in the plenum for the purpose of controlling the modulating bypass position.

The plastic housing contains a diaphragm, a calibration spring and a snap-acting SPDT switch. The sample line connections located on each side of the diaphragm accept flexible tubing. The clear cover guards against accidental contact with the live switch terminal connections and the set point adjusting knob.

Pitot tube (air probe) for mounting in tubing and flexible poly tubing included with each SPC.

Mounting

Select a mounting location which is free from vibration. The **SPC** must be mounted with the diaphragm in any vertical plane in order to obtain the lowest specified operating set point. Mount with the sample line connections in the "DOWN" position. Use standard sheet metal screws through at least two of the four mounting holes.

Air Sample Connection

The **SPC** is designed to accept flexible tubing by means of 1/4" slip-on connections. A 12" piece of ¼" ID Flexible tubing is included with the SPC as well as a Pitot Tube for mounting in the plenum. Locate the sampling probe a minimum of 2 feet downstream from the air source. Install the sampling probe as close to the center of the airstream as possible. Do not allow supply pressure to blow directly into the Pitot Tube. Connect the provided flexible tubing to the *High-Pressure Inlet* as shown on back page.



Technical Data

Set Point Range	.08" w.c. to 1.20" w.c.
Jet i onit mange	.00 W.C. to 1.20 W.C.

Pressure Connections P1 (+) High Pressure P2 (-) Low Pressure

Switching Differential 20Pa (0.08" w.c.)

Maximum Pressure 10KPa

Operating Temperature -4 Deg F to +140 Deg F

Electrical Rating 1.0 Amp MAX

Contact Arrangement SPDT

Electrical Connections 1 NO - Operating Contact

2 NC - Break Contact 3 COM - Power Supply

Cable Connection 1/2" Gland


Connector

Sample Line Connections 1/4" ID Tubing

Weight 5.6 Oz

BYPASS Setup Static Pressure Controlled Bypass (MODULATING)

STATIC PRESSURE CONTROLLER (ASPC-2)

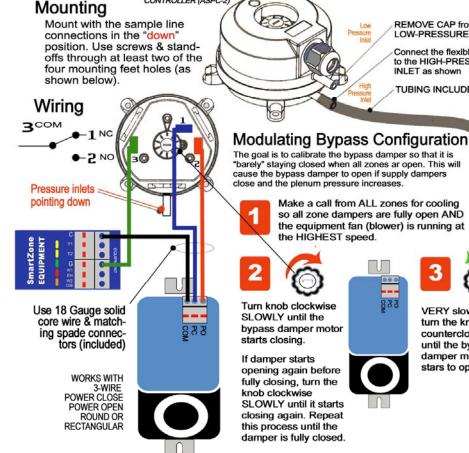

REMOVE CAP from LOW-PRESSURE INLET

Connect the flexible tubing to the HIGH-PRESSURE INLET as shown

TUBING INCLUDED

Air Probe (Pitot Tube)

Locate the air probe (pitot tube) at least

2 FEET AIRFLOW

downstream from the air source, preferably as close to the center of the airstream as possible.



supply air pressure to blow directly into the pitot

PITOT TUBE

Make a call from ALL zones for cooling so all zone dampers are fully open AND the equipment fan (blower) is running at the HIGHEST speed.



Turn knob clockwise SLOWLY until the bypass damper motor starts closing.

If damper starts opening again before fully closing, turn the knob clockwise SLOWLY until it starts closing again. Repeat this process until the damper is fully closed.





VERY slowly turn the knob counterclockwise until the bypass damper motor stars to open.







Just as soon as the motor starts to run open, turn the knob back clockwise just enough that the damper motor stays closed.



To test if bypass is sized and configured properly, make a call ONLY from the smallest zone for cooling with the fan at the HIGHEST speed; the BYPASS damper should fully or almost fully open within 1 to 2 minutes.

